



i-Tech Company LLC TOLL FREE: (888) 483-2418

EMAIL: info@itechlcd.com WEB: www.iTechLCD.com

The On Screen Display (OSD) is adjusted as follows:

- 1. Press the Menu Button (See Diagram 1) Located on the OSD keypad Overlay.
- 2. Use the navigation buttons to maneuver through the OSD menu
- 3. Select the desired OSD Menu from the Screen Shots below to make the desired adjustment(s).

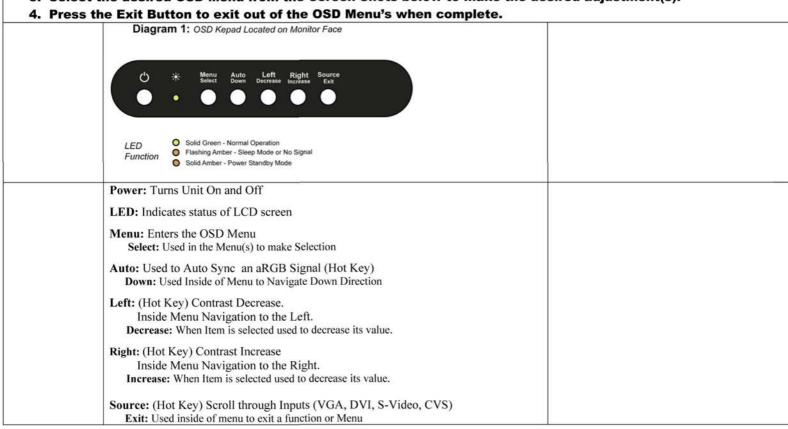

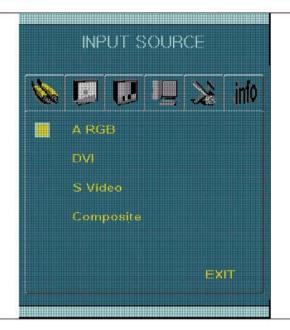



Main Menu	Sub Menu	Operation
Input Source	ARGB	-Change input signal source to Analog RGB.
	DM	-Change input signal source to DM.
	S Video	-Change input signal source to S-video.
	Composite	-Change input signal source to composite video,
	Exit	-Go back to main menu.

Main Menu	Sub Menu	Operation	
Picture	Brightness	-Adjust Brightness of the screen.	
	Contrast	-Contrast is ratio of luminance between black and white. -Adjust distinction.	
	Blacklevel	-Adjust black level. -Adjust Sharpness of pictures. -Adjust between green tone and purple tone.	
	Sharpness		
	Hue (Video Only)		
	Saturation (Video Only)	-Adjust color intensity.	
	Exit	-Go back to main menu.	





Sub Menu	Operation	
Temperature	-Choice of Warm, Normal, Cool and user's option is chosen, RGB can be adjusted.	
	-User: Able to adjust the color by controlling Red, Green, and Blue.	
	-Warm: Red-tinged screen.	
	-Normal : Green-tinged screen.	
	-Cool: blue-tinged screen.	
Auto Color (A-RGB Only)	Color automatically set from strange input signal.	
Exit	-Go back to Main Menu.	



Main Menu	Sub Menu	Operation
	Auto	-Auto configuration of geometry.
	Width	-Adjust horizontal size of the screen by increasing or decreasing the number of picture
IMAGE CONTROL		elements.
	Phase	-Adjust Phase of screen. Used when noise or overlapped lines are shown on the
Available Mode - Analog		screen.
RGB	HPosition	-Move screen horizontally.
	V Position	-Move screen vertically.
	Exit	- Go Back to Main Menu





Main Menu	Sub Menu	Operation
	OSD Cotrol	-Time Out: The range of controlling the duration time of the OSD menu (OSD turn-off time)H Position: Adjust horizontal position of OSD Menu by valueV Position: Adjust vertical position of OSD Menu by value.
TOOL	Reset	-Initial set-up, preset by the factory before forwarding.
	Reset Color	-Initial color.
	Reset Position (A RGB Only)	-Initial position.
	Exit	-Go back to Main Menu.