

USER MANUAL

Rackmount Keyboard Drawer



Model
NK1 Series
-With KVM Options



Model
NK2 Series
-With KVM Options
-Short Depth Version


Contents

Chapter 1	Getting Started	
	1.1 Package Contents.....	1
	1.2 Before Installation.....	2
	1.3 Unpacking.....	2
	1.4 Optional Accessories.....	2
	1.5 Peripheral Products.....	3
	1.6 Structure Diagram.....	3
	1.7 Installation.....	4
	1.8 Connect to server via USB interface.....	5
	1.9 Connect to KVM via USB interface.....	5
	1.10 Connect to server via PS/2 interface.....	6
	1.11 Connect to KVM via PS/2 interface.....	6
Chapter 2	Keyboard and Mouse	7
Chapter 3	Optional Specification	
	3.1 KVM options for NK1 Series.....	8
	3.2 Environmental.....	8
Chapter 4	Dimensions	8



1.1 Package Contents

 Chapter 1

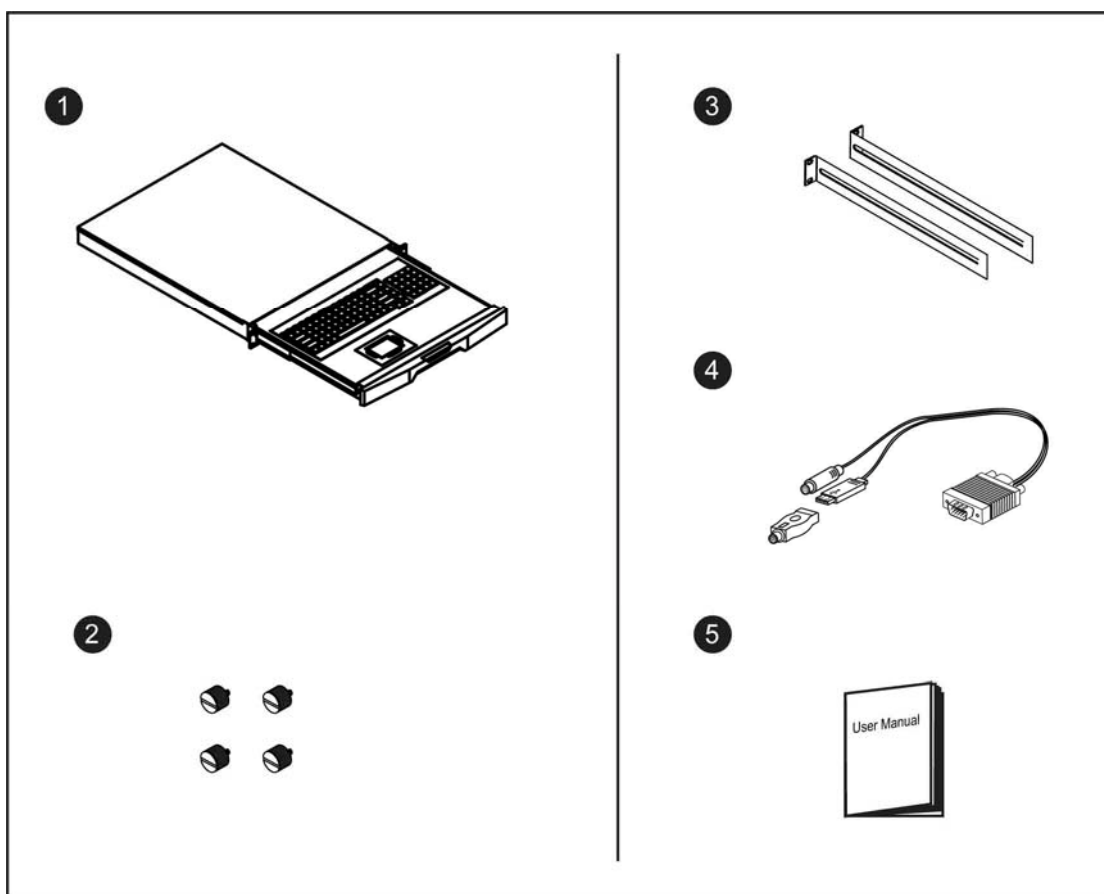

1 keyboard drawer x 1 pc

2 Fasteners for rear L-bracket x 4 pcs

3 330mm rear mounting L-bracket x 1 pair

* NK1 series mounting depth-adjustable from 210 to 800mm

* NK2 series maximum mounting depth is 645mm

4 Combo keyboard cable x 1 pc

5 User manual x 1 pc

1.2 Before Installation

Chapter 1

- It is very important to locate the LCD Keyboard Drawer in a suitable environment.
- The surface for placing and fixing the LCD Keyboard Drawer should be stable and level or mounted into a suitable cabinet.
- Make sure the place has good ventilation, is out of direct sunlight, away from sources of excessive dust, dirt, heat, water, moisture and vibration.
- Convenience for connecting the Rackmount Keyboard Drawer to the related facilities should be well considers too.

13 Unpacking

The Rackmount Keyboard Drawer comes with the standard parts shown on the package contents. Check and make sure they are included and in good condition. If anything is missing, or damage, contact the supplier immediately.

1.4 Optional Accessories

 
1. Extended rear mounting L-bracket

1.1 430mm (16.9") extended rear L-bracket for :

NK1 series up to 900mm

NK2 series up to 745mm

*Extended rear L-bracket in tailor-made length on request

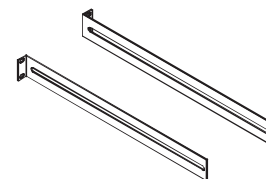


1.5 Peripheral Products

Chapter 1

Item	Model No.	Description
Matrix Cat6 KVM	MC0116 / MC0216 / MC0316 MC1116 / MC1216 / MC2116 MC0132 / MC0232 / MC0332 MC1132 / MC1232 / MC2132	Matrix Cat6 16 port KVM Matrix IP Cat6 16 port KVM Matrix Cat6 32 port KVM Matrix IP Cat6 32 port KVM
Matrix DB-15 KVM	M018/ M028 / M038 M118 / M128 / M218 M0116 / M0216 / M0316 M1116 / M1216/ M2116	Matrix DB-15 8 port KVM Matrix IP DB-15 8 port KVM Matrix DB-15 16 port KVM Matrix IP DB-15 16 port KVM
Combo Cat6 KVM	NVC800 / NVCCE800 / NVCIP800 NVC1600 / NVCCE1600 / NVCIP1600 NVC3200/ NVCCE3200 / NVCIP3200	Combo Cat6 8 port KVM Combo Cat6 16 port KVM Combo Cat6 32 port KVM
Combo DB-15 KVM	NVS801 / NVCE800 / NVIP-802 NVS1601 / NVCE1600 / NVIP-1602	Combo DB-15 8 port KVM Combo DB-15 16 port KVM
PS/2 DB-15 KVM	NV401A / NV801A / NV1601A	4 / 8 / 16 port PS/2 DB-15 KVM
Rackmount LCD Drawer	RP-115 / 117 / 119 RP-W119	1U 15" / 17" / 19" LCD drawer 1U wide screen 19" LCD drawer
Rackmount LCD Display	RP-717 / 819 / 920 RP-W719 / 822	7U 17" / 8U 19" / 9U 20" LCD display 7U 19" / 8U 22" wide screen LCD display

 1.6 Structure Diagram

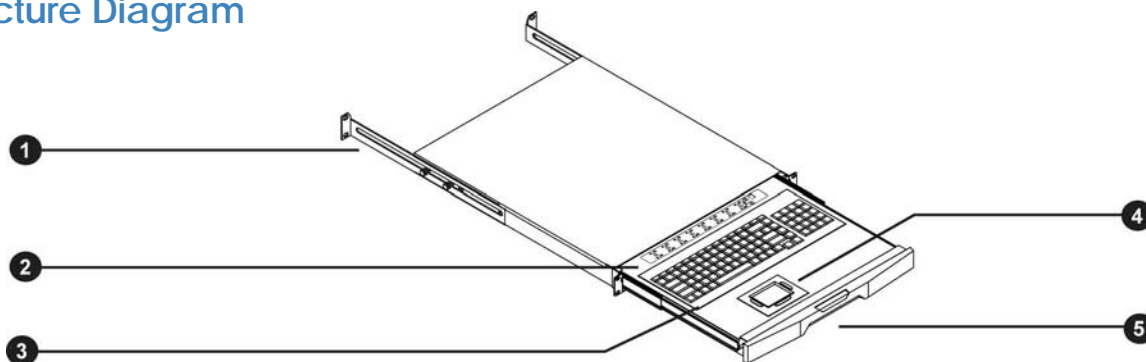

- 1 Adjustable rear mounting L-bracket
- 2 Membrane switch (for RK-1 with KVM option)
- 3 Keyboard interchangeable module kit
- 4 Mouse interchangeable module kit
- 5 Carry handle to release the 2-pt lock

1.7 Installation

Chapter 1

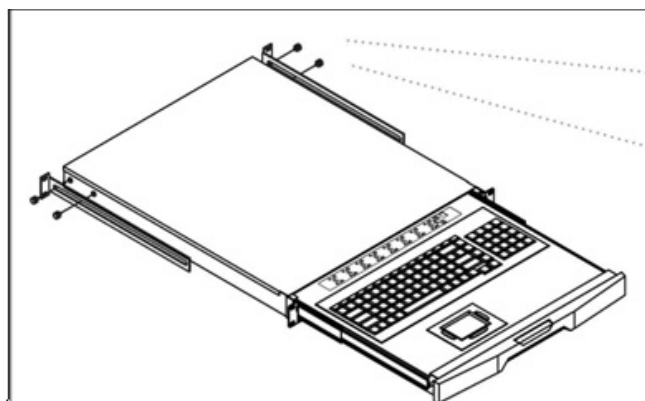 


Figure 1. Installing the rear L-bracket to the LCD keyboard drawer.

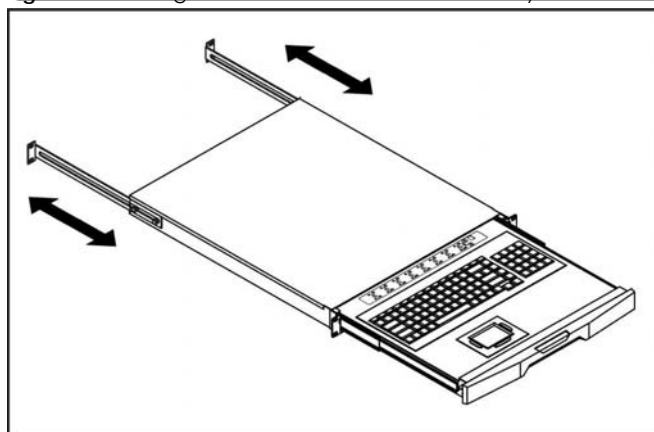 


Figure 2. Aligning the rear L-brackets to a suitable length for the rack.

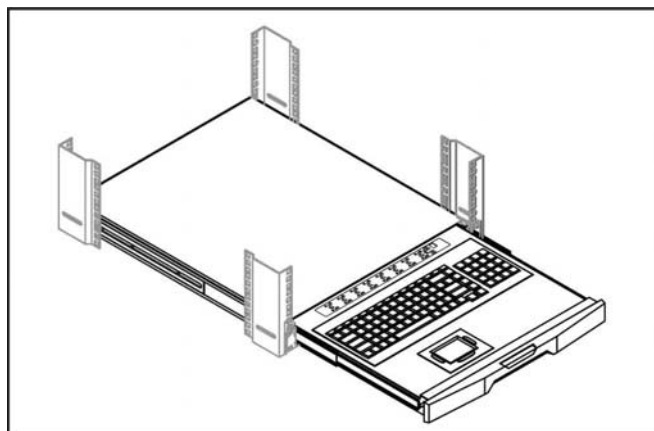 


Figure 3. Fixing the LCD keyboard drawer into the rack.

- Install each rear L-bracket using two fasteners shown in **Figure 1**.
- Leaving the fasteners slightly loose.

- Measure the front and rear mounting depth of the rack.
- Align each rear L-bracket to a suitable length and tighten the fasteners shown in **Figure 2**.

- Fixed the LCD keyboard drawer into the rack.
- * Hardware (screws and cage nuts) for fixing the mounting bracket to the rack is not provided.

1.8 Connect to server via USB

Chapter 1

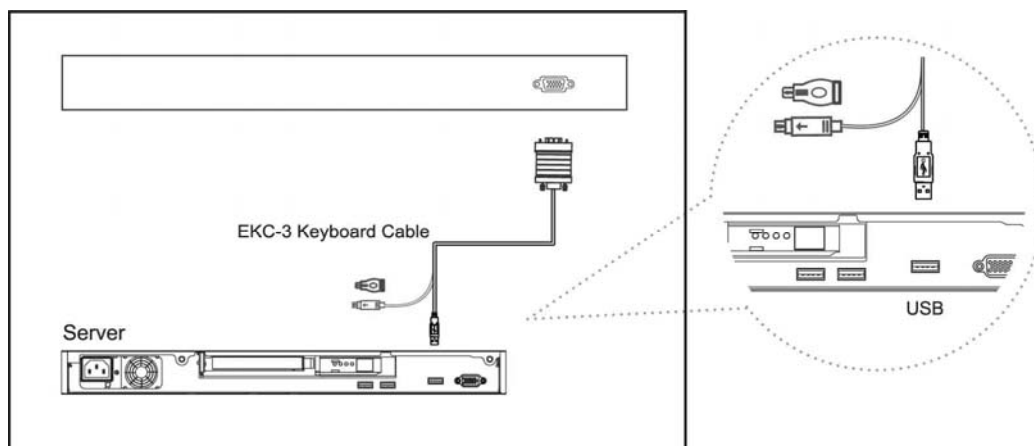 


Figure 4. Example of connecting EKC-3 keyboard cable to server via USB interface

1.9 Connect to KVM via USB Interface

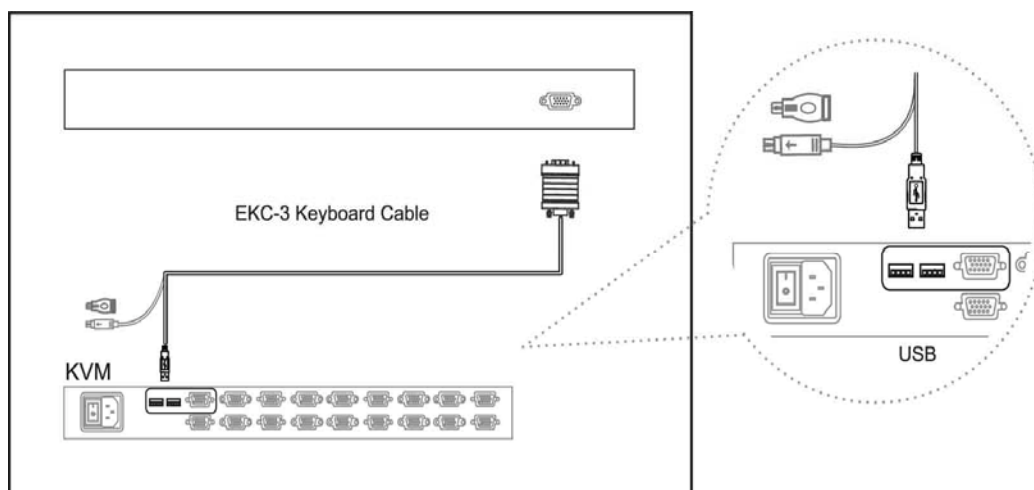 


Figure 5. Example of connecting EKC-3 keyboard cable to KVM via USB interface

Remarks:

- The above connection is only for the keyboard without KVM switch built-in.
- For the keyboard drawer with KVM switch built-in, please refer to www.i-techcompany.com.

1.10 Connect to Server via PS/2

Chapter 1

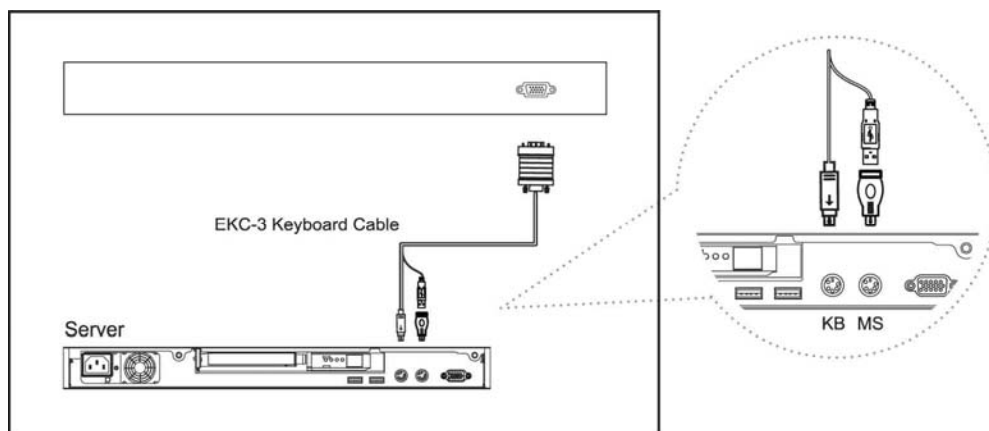 


Figure 6. Example of connecting EKC-3 keyboard cable to server via PS/2 interface

1.11 Connect to KVM via PS/2

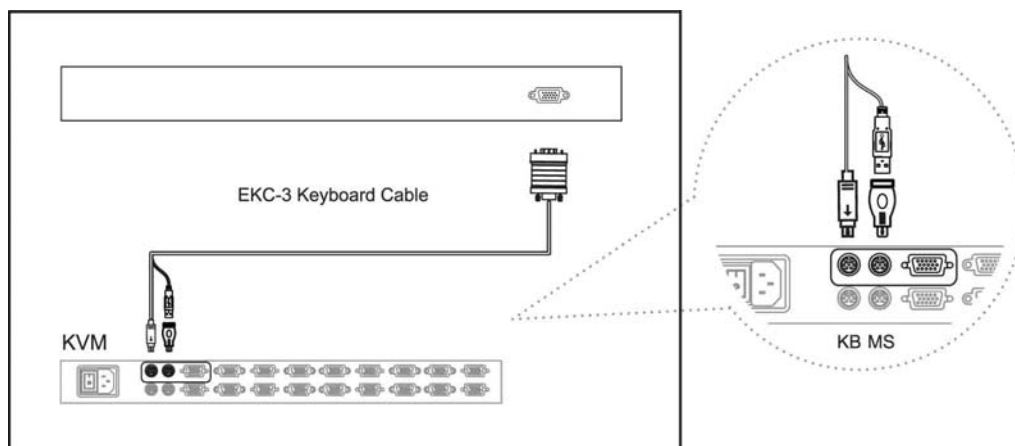 


Figure 7. Example of connecting EKC-3 keyboard cable to KVM via PS/2 interface

Remarks:

- The above connection is only for the keyboard without KVM switch built-in.
- For the keyboard drawer with KVM switch built-in, please refer to www.austin-hughes.com.





Caution: The LCD keyboard drawer is hot-pluggable, but components of connected devices, such as the servers and KVM switch, may not be hot-pluggable. Plugging and unplugging cables while servers and KVM are powered on may cause irreversible damage to the servers, KVM and LCD keyboard drawer. Before attempting to connect anything to the LCD keyboard drawer, we suggest turning off the power to all devices before connecting them. Apply power to connected devices again only after the LCD keyboard is receiving power. The company is not responsible for damage caused in this way.



2.1 Keyboard & Mouse

Chapter 2

  Supporting layouts

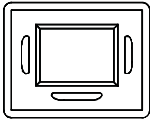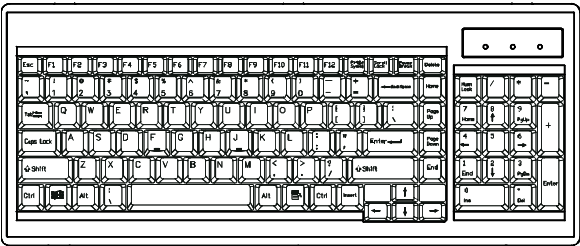


e N keyboard integrated with touchpad

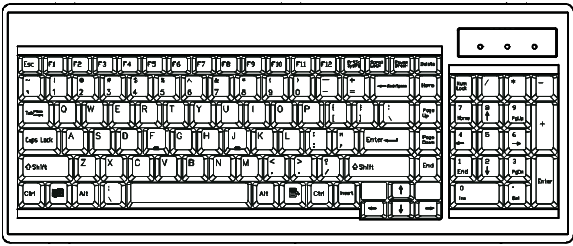  


b N keyboard integrated with Trackball

 Supporting layouts only

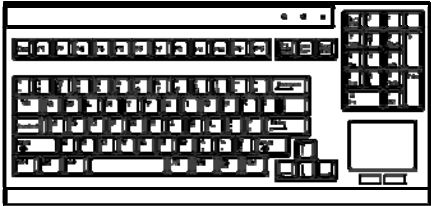

† Compact keyboard integrated with touch-pad mouse

 Supporting layouts only

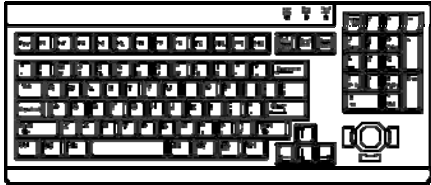

d Compact keyboard integrated with trackball

3.1 KVM Options for NK1 Series

Chapter 3

Our KVM is designed to seamlessly integrate into the rear of our full range of LCD drawer solutions:

- For KVM operation, please refer to "Integrated LCD KVM Switch" user manual
- Option with Multiple consoles Matrix KVM
- Option with high density & cost efficient Combo KVM integration with either 8 / 16 / 32 ports
- Option with low cost PS/2 KVM
- Please ask your supplier for full KVM details

Remarks:

- NK1 series has KVM option only.

3.2 Environmental

Operation	0° to 50°C Degree
Storage	-5° to 60°C Degree
Relative Humidity	5~90%, non-condensing
Shock	10G acceleration (11ms duration)
Vibration	5~500Hz 1G RMS random vibration

4.1 Dimensions

Chapter 4

Model	Product Dimension (W x D x H)	Packing Dimension (W x D x H)	Net Weight	Gross Weight
NK1 series (with KVM option)	442 x 550 x 44.2 mm 17.4 x 21.6 x 1.74"	581 x 705 x 175 mm 22.9 x 27.8 x 6.9"	8 kg 18 lb	12 kg 26 lb
NK2 series	442 x 400 x 44 mm 17.4 x 15.7 x 1.73"	500 x 582 x 100 mm 19.7 x 22.9 x 3.9"	6 kg 13 lb	8 kg 18 lb

The company reserves the right to modify product specifications without prior notice and assumes no responsibility for any error which may appear in this publication.

All brand names, logo and registered trademarks are properties of their respective owners.

Copyright 2009 i-Tech Company LLC. All rights reserved.