

How to integrate RS232 Board into AToD Board



i-Tech Company LLC

TOLL FREE: (888) 483-2418 • EMAIL: info@itechlcd.com • WEB: www.iTechLCD.com

Open the cover of back housing you can see the AD board

