How to change the IP module on 16Ports KVM LCD Keyboard Console MODEL: NVIP117162e

Before your work, please make sure that the power is disconnected.

Step 1: Remove the top rear kit cover. 7 screws on the top, 4 screws on each








i-Tech Company LLC

EMAIL: info@itechlcd.com • WEB: www.iTechLCD.com

Step 2: Disconnect the connection board and remove the 2 hexagon nut to replace the IP network module.



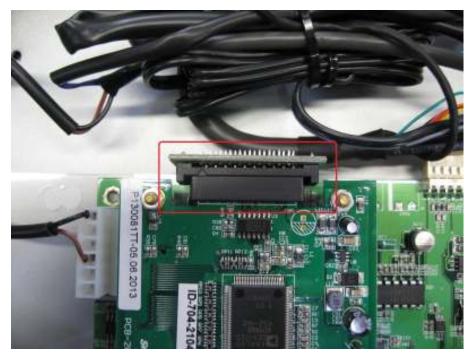

Step 3: Follow the step backward to complete this modification.



i-Tech Company LLC

EMAIL: info@itechlcd.com • WEB: www.iTechLCD.com