



NK2e / NK2b

1U Short Depth Keyboard Drawer

User Manual

FC CE



REACH

Contents

< Part. 1 > NK2e / NK2b

1.1	Package Content	P.1
1.2	Structure Diagram & Dimension	P.1
1.3	Installation	P.3
1.4	Connection	P.4

< Part. 2 > Specifications

2.1	Keyboard / Mouse Specifications	P.5
2.2	Environmental Conditions	P.8

Before Installation

- It is very important to mount the equipment in a suitable cabinet or on a stable surface.
- Make sure the place has a good ventilation, is out of direct sunlight, away from sources of excessive dust, dirt, heat, water, moisture and vibration.

Unpacking

The equipment comes with the standard parts shown in package content. Check and make sure they are included and in good condition. If anything is missing, or damaged, contact the supplier immediately.

< Part 1 > NK2e / NK2b


< 1.1 > Package Content




NK2e or NK2b unit X 1

- Pair of L-bracket with fastener screws X 1


< 1.2 > Structure Diagram

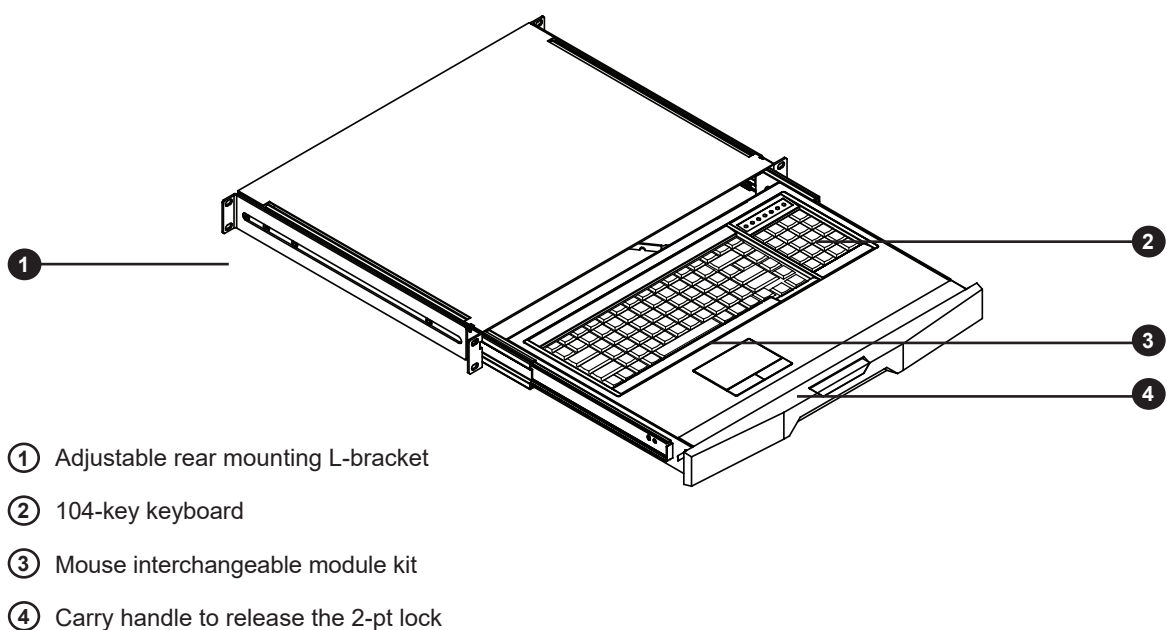


Front View

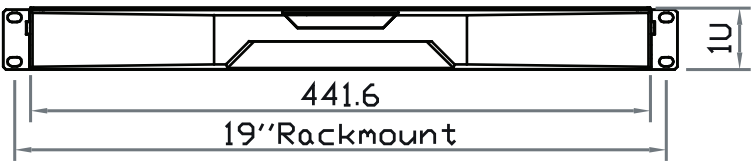


Rear View

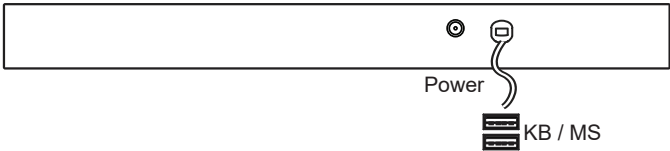

Side View

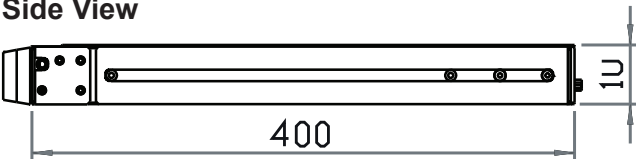

Top View

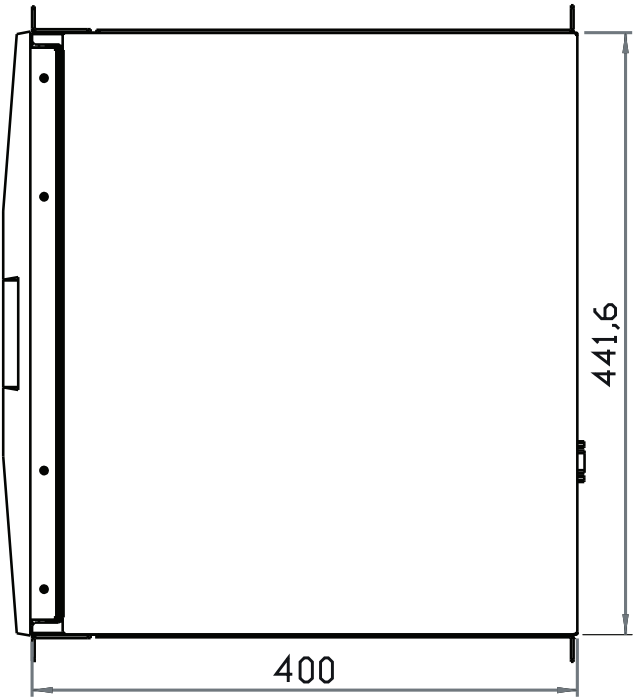


UNIT : mm
1mm = 0.03937 inch


Model	Product Dimension (W x D x H)	Packing Dimension (W x D x H)	Net Weight	Gross Weight
NK2e / NK2b	441.6 x 400 x 44 mm 17.4 x 15.7 x 1.73 inch	582 x 500 x 100 mm 22.9 x 19.7 x 3.9 inch	8.6 kg 18.9 lb	10.1 kg 22.2 lb

* All dimensions stated are subject to change if options are selected / integrated to base model part codes


< 1.3 > Installation- How to install L-bracket

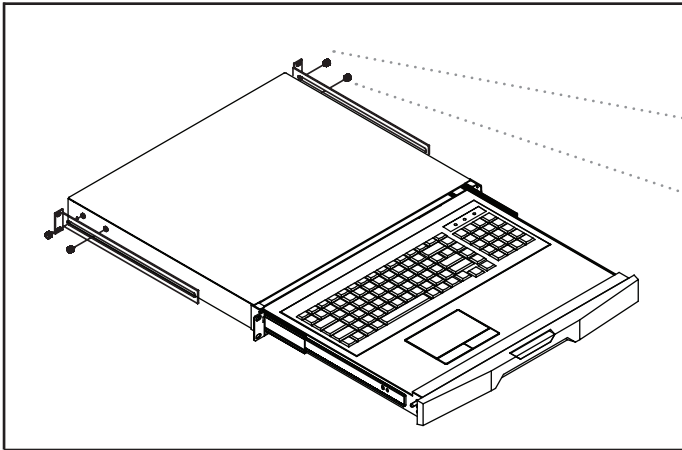

Step 1

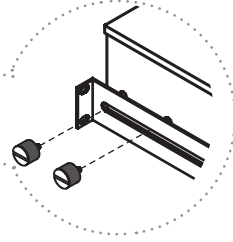


- Install left & right rear L-brackets with two fasteners shown above.
- Leave the fasteners slightly loose.

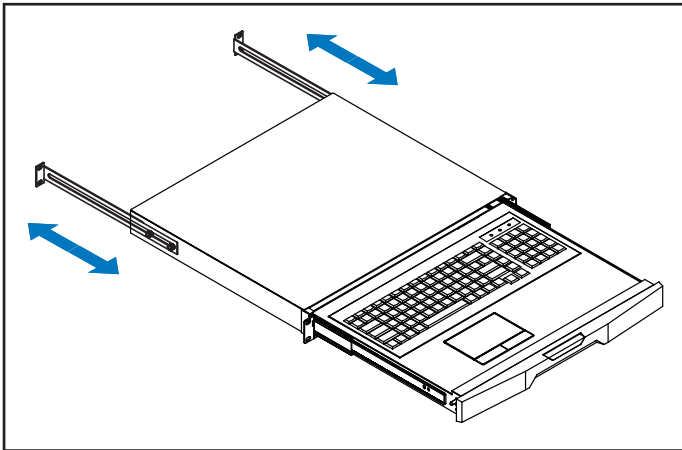


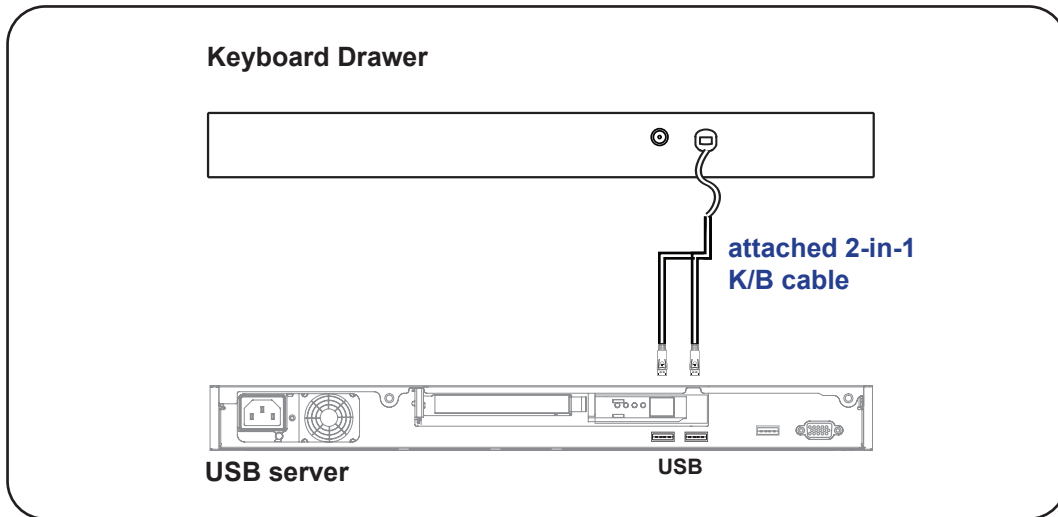
Step 2

- Measure the depth of the front and rear mounting rails.
- Align each rear L-bracket to a suitable length and tighten the fasteners.

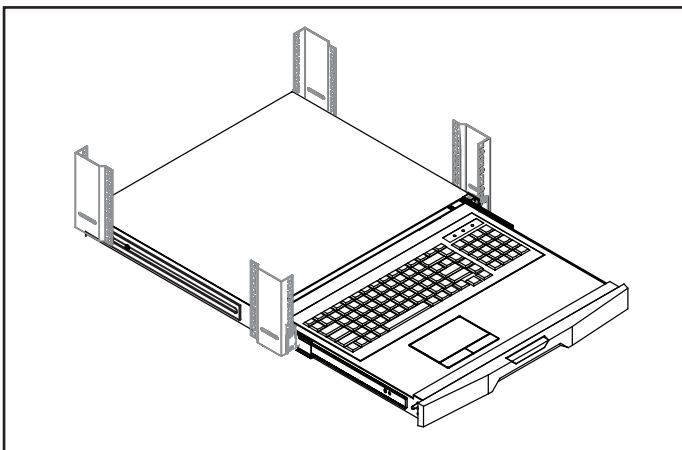


Step 3

- Fix the keyboard drawer into the rack.
-  **M6 mounting screws & cage nuts are not provided.**



< 1.4 > Connection to **external KVM**


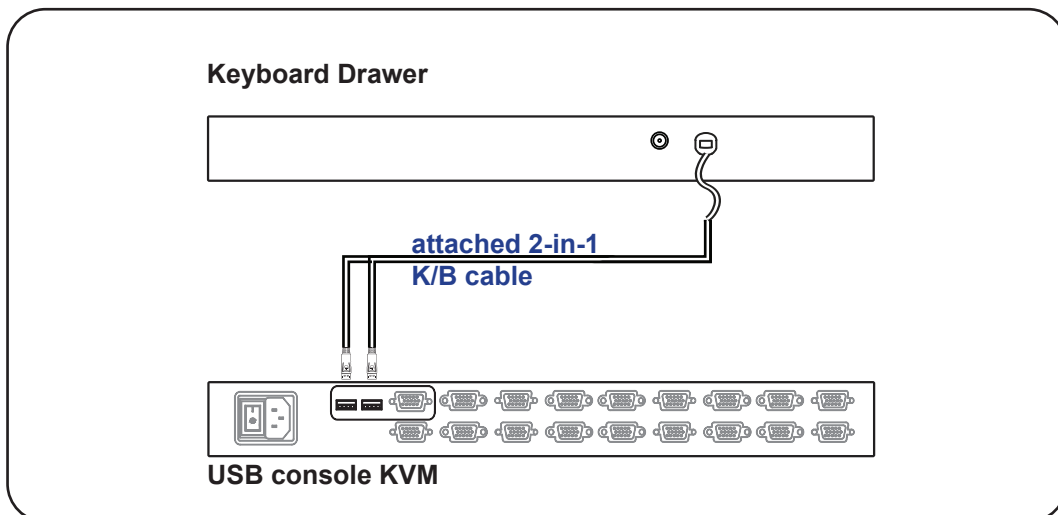


Caution : The keyboard drawer is hot-pluggable, but components of connected devices, such as the servers and KVM switch, may not be hot-pluggable. Plugging and unplugging cables while servers and KVM are powered on may cause irreversible damage to the servers, KVM and keyboard drawer. Before attempting to connect anything to the keyboard drawer, we suggest turning off the power to all devices. Apply power to connected devices again only after the keyboard drawer is receiving power. The company is not responsible for damage caused in this way.



< Part 2 > Specifications

< 2.1 > Standard Keyboard / Mouse Specifications

Ge G keyboard integrated with touchpad

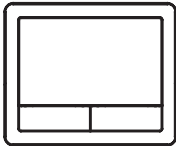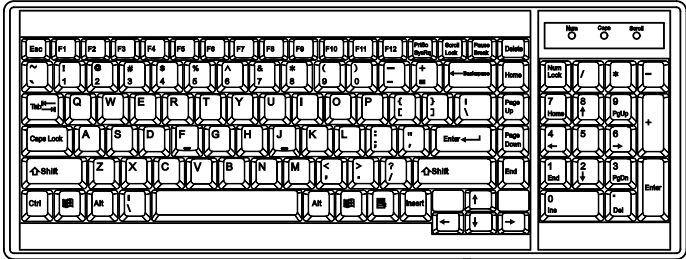

Gb G keyboard integrated with trackball

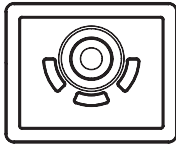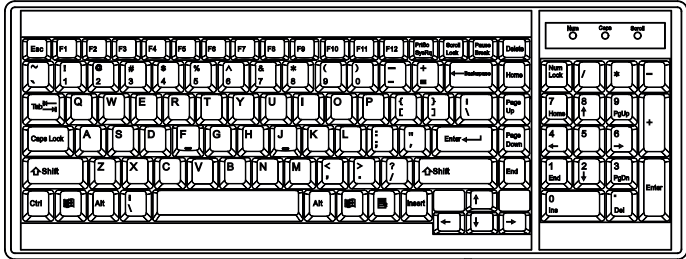

Key force	55 ± 5g
Travelling distance	3 ± 0.3mm
Switch life	> 10 million life cycle time
OS support	Windows / Linux / Unix / Mac OS

Supporting layouts

America



United States

EMEA



United Kingdom



Germany



France



Spain



Italy

Asia





Japan




Korea

Me MAC keyboard integrated with touchpad

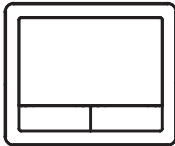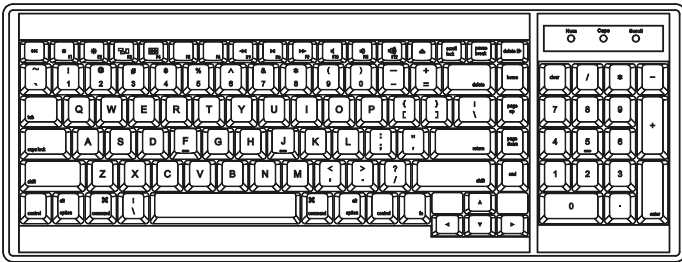

Mb MAC keyboard integrated with trackball

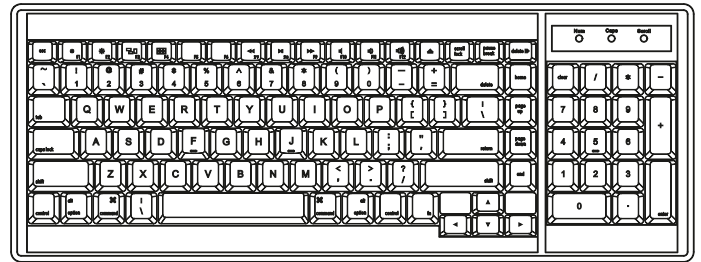


Supporting layouts

America




How to Use "MAC" Keyboard

 
Keyboard Features




F1
Decrease display brightness

 


F9
Fast-forward

 

F2
Increase display brightness

 

F10
Mute sound

 

F3
Mission control
* Only works with OS X Lion
default Keyboard Shortcuts.



F11
Decrease volume



F4
Dashboard



F12
Increase volume



F7
Rewind



Eject disc





F8
Play / Pause





Command

< 2.1 > SUN Keyboard / Mouse Options

GSe GS keyboard integrated with touchpad

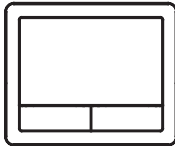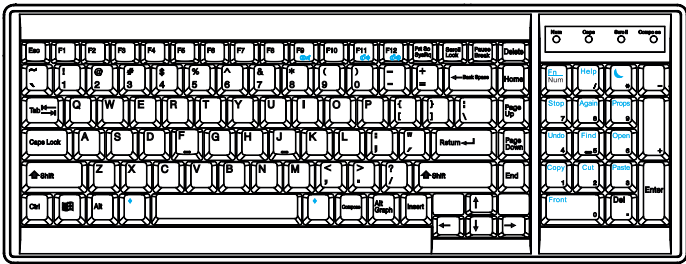

GSb GS keyboard integrated with trackball

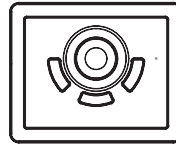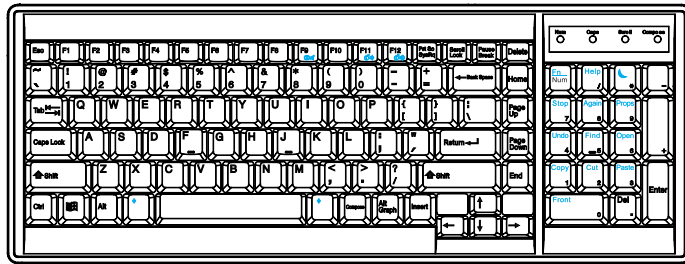


GS keyboard integrated with touchpad / trackball




- Incorporates SUN keys, including Stop, Cut, Paste, Compose, Copy and Help
- 104 key notepad keyboard with full numerical pad and SUN function
- USB interface
- US layout only

How to Use "GS" Keyboard

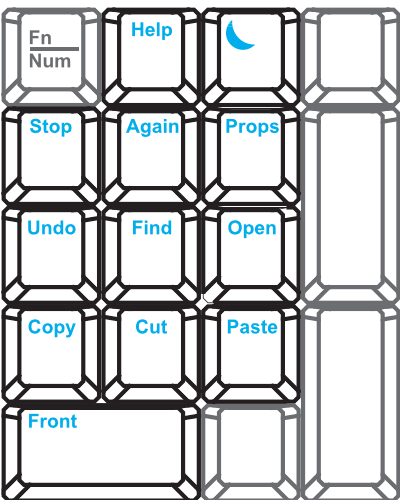

Num LED in Off mode

Key pad behaves as a SUN Solar system administration command mode

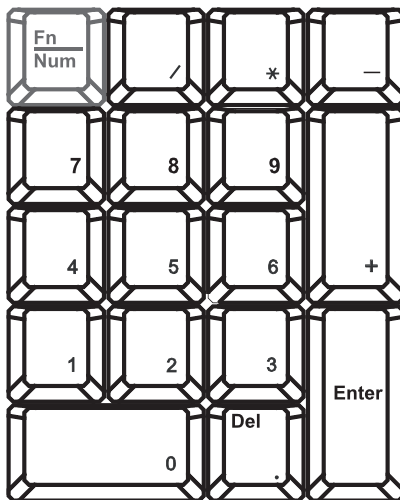


Num LED in Green mode


Key pad behaves as a normal key pad mode

Audio / Display Keys

 
* Please ask your supplier for full details



F9
Audio : Mute
Display : Degauss

 

 F11
Audio : Decrease volume
Display : Decrease contrast



F12
Audio : Increase volume
Display : Increase contrast

Operating	Temperature	0 to 55°C degree
	Humidity	20~90%, non-condensing
	Altitude	16,000 ft
Storage / Non-operating	Temperature	-20 to 60°C degree
	Humidity	5~90%, non-condensing
	Altitude	40,000 ft
	Shock	10G acceleration (11ms duration)
	Vibration	10~300Hz 0.5G RMS random vibration