

# PNPC SERIES



## Panel PC Bracket Installation



**Step 1:**

Turn the system around, with the back facing up. (Please make sure to have a soft padding to protect the front of the screen)



**Step 2:**

Turn the system to the right (to the side with the power switch) and take down the screws in the red-circled areas.



**Step 3:**

Turn the system to the left (side with MSR & HDD), and unscrew the screws in the green-circled areas.




**Step 4:**

Place the bracket onto the side of the system, as shown, and screw the unscrewed screws back onto the system to secure the bracket.



**Step 5:**

Do the same with the other side of the system.

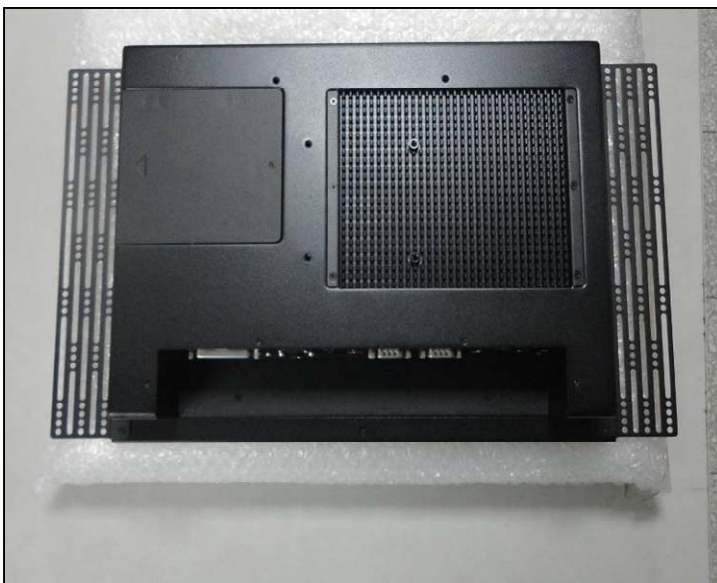

**Step 6:**

Complete